

Find the perfect bag for your digital camera.



Neo's Digital 12
Model 3812
5680, 5204



Neo's Digital 14
Model 3814
5680, 5204



Ultra-Compact
Digital
Model 5686
3819, 5206



Pro
Compact Digital
Model 5689



Compact Digital
Model 5690
3821, 5214, 5290



Digital 1
Model 5691



Digital 2
Model 5692
5292



Digital 3
Model 5693



Digital 6
Model 5696
5230, 5682

OTHER MODELS

Digital Cameras

OTHER MODELS	Neo's Digital 12 Model 3812	Neo's Digital 14 Model 3814	Ultra-Compact Digital Model 5686	Pro Compact Digital Model 5689	Compact Digital Model 5690	Digital 1 Model 5691	Digital 2 Model 5692	Digital 3 Model 5693	Digital 6 Model 5696
CANON									
SD780IS, SD790IS, SD940IS, SD1400IS, Elph 300HS	✓	✓							
A2200IS, A3200IS, A3300IS, Elph 100HS, SD880IS, SD970IS, SD1200IS, SD1300IS		✓							
A480, A490, A495, A800, A1000IS, A1100IS, A3000IS, A3100IS, SD3500IS, SD4000IS, SD960IS, SD980IS, SD990IS			✓						
A1200, Elph 500HS, S90, S95, SD4500IS					✓				
A2000IS, A2100IS, E1, SX200IS, SX210IS, SX220HS, SX230HS				✓		✓			
A590IS, D10, G10, G11, G12, SX110IS, SX120IS, SX130IS				✓			✓		
SX11S, SX10IS, SX20IS, SX30IS									✓
CASIO									
EX-Z80, EX-Z85, EX-Z90, EX-Z450, EX-Z800	✓	✓							
EX-S5, EX-S10, EX-S12, EX-S770, EX-Z9, EX-Z33, EX-Z150, EX-Z200, EX-Z300		✓							
EX-S7, EX-S200, EX-Z35, EX-Z250, EX-Z270, EX-Z280, EX-Z400, EX-Z550, EX-Z2000			✓						
EX-FC100, EX-FH100, EX-FS10, EX-G1, EX-H5, EX-H10, EX-H15, EX-H30, EX-S8, EX-Z16, EX-Z29, EX-Z2300, EX-ZR100, EX-ZS5, EX-ZS10					✓				
TRYX				✓		✓			
EX-HG20, EX-ZR10				✓			✓		
EX-FH20								✓	
FUJI									
J30, Z33, Z70, Z200fd, Z300	✓	✓							
J10, J50, JV200, JX300, JX350, Z35, Z37, Z90		✓							
A100, A150, A170, AV200, AV250, AX200, AX205, AX350, F60fd, F200EXR, J20, J100, J110W, J120, J150W, J250, J500, JZ500, T200, Z30, Z33WP			✓						
F70EXR, F80EXR, XP10, XP30, Z700EXR, Z800EXR					✓				
Real 3D W3				✓		✓			
F300EXR, F500EXR, F550EXR						✓			
S1500, S1600, S1800, S2500HD, X100								✓	
S200EXR, S2000HD, S2950, S3200, S4000, S8100fd, HS10, HS20EXR									✓
KODAK									
EasyShare Mini, M1063	✓	✓							
M320, M340, M341, M530, M590, M1073IS, M1093IS		✓							
C160, C180, C913, C1013, EasyShare Touch, M575			✓						
C713, C813, EasyShare Sport, M380, M381, M550, Z1485IS					✓				
M580, Z950, Z1015IS								✓	
Z980, Z981									✓
NIKON									
S210, S220, S230, S3000, S4000	✓	✓							
S620, S700, S4000		✓							
L19, L20, L22, S52c, S60, S70, S570, S610, S610c, S630, S640, S710, S1000PJ, S5100, S6000, S8000			✓						
L21, L24, P300, S80, S3100, S4100, S6100, S8100, S9100					✓				
P6000, S1100pj				✓		✓			
P7000							✓		
L100, L110, L120								✓	
P80, P90, P100, P500									✓

Find the perfect bag for your digital camera.



Neo's Digital 12
Model 3812
5680, 5204



Neo's Digital 14
Model 3814
5680, 5204



Ultra-Compact
Digital
Model 5686
3819, 5206



Pro
Compact Digital
Model 5689



Compact Digital
Model 5690
3821, 5214, 5290



Digital 1
Model 5691



Digital 2
Model 5692
5292



Digital 3
Model 5693



Digital 6
Model 5696
5230, 5682

OTHER MODELS

Digital Cameras

	Neo's Digital 12 Model 3812	Neo's Digital 14 Model 3814	Ultra-Compact Digital Model 5686	Pro Compact Digital Model 5689	Compact Digital Model 5690	Digital 1 Model 5691	Digital 2 Model 5692	Digital 3 Model 5693	Digital 6 Model 5696
OLYMPUS									
VG110	✓	✓							
FE20, FE360, FE370, FE400, FE3000, FE3010, FE4030, FE4040, FE5050, Stylus 5010, VG120		✓							
FE25, FE45, FE47, FE3035, FE5000, FE5010, FE5020, FE5030, FE5040, Stylus 550WP, 1040, 1050SW, 7000, 7010, 7030, 7040, Tough 6000, 6010, 6020, 8000, 8010			✓						
Stylus 9000, 9010, TG310, TG610, Tough 3000, VR320, VR330					✓				
SZ10				✓		✓			
XZ1				✓			✓		
SP610UZ								✓	
SP565UZ, SP590UZ, SP600UZ, SP800UZ									✓
PANASONIC									
FH2, FH5, FP8, FS6, FS7, FS12, FS15, FS25, FS62, FX35, FX37, FX48, FX65, FX66, FX150, F500		✓							
FH20A, FH25, FH27, FP1, FP2, FP3, FS10, FS11, FS30, FS33, FS42, FX78, FX580, S1, S3, TS1, ZR1			✓						
FP5, FP7, FX75, FX700, LS85, TS2, ZS1, ZS3, ZS8, ZS10					✓				
LX3, TZ50, ZS5, ZS7				✓		✓			
TS3				✓		✓			
GF2, LX5				✓			✓		
FZ28, FZ35, FZ40, FZ100									✓
PENTAX									
A40, M60, M85, WS80		✓							
E60, E70, E80, E85, M90, P70, P80, V20, W60, W80			✓						
H90, I10, W90						✓			
X70, X90									✓
SAMSUNG									
L100, L110, L201, PL50, ST80, TL105	✓	✓							
AQ100, CL5, ES55, L310W, PL65, SL102, SL202, SL720, ST10, ST50		✓							
ES10, ES15, NV9, PL200, SL420, SL620, SL820, TL110, TL205, TL210, TL220, TL225, TL320, TL350			✓						
CL80, HZ10W, HZ15W, HZ30W, HZ35W, TL100, TL240, WB500					✓				
TL500				✓		✓			
NX11								✓	
HZ25W, HZ50W									✓
SONY									
W350, W380	✓	✓							
S950, S980, T90, T99, T110, T900, TX1, TX5, TX10, W220, W230, W310, W320, W330, W530, WX1, WX5		✓							
G3, S730, T500, TX100V, W290			✓						
H55, H70, HX5, HX7V, HX9V, S2000, S2100, TX7, TX9, W370					✓				
H20							✓		
HX1, HX100V									✓